

Instruction Booklet

Fabric Installation

Please read all instructions
carefully before opening box

parallax

1

WASH HANDS THOROUGHLY, WEAR COTTON GLOVES


2

TO SAVE TIME, PLEASE WIPE DOWN ALL SURFACES THAT FABRIC COULD COME IN CONTACT WITH. DIRT & DUST WILL SHOW AS SMUDGES ON FABRIC. SMUDGES OR DIRT ON FABRIC WILL HAVE TO BE CLEANED AFTER INSTALLATION IS COMPLETE.

3


OPEN GRAPHICS BOX .
BE CAREFUL NOT TO CUT
INTO THE BAGS OR THE BOX
AS YOU COULD DAMAGE
THE FABRIC

PULL YOUR PARALLAX
FABRIC OUT OF THE BOX
& BE MINDFUL TO NOT
LET THE FABRIC TOUCH
THE FLOOR OR ANY
DIRTY SURFACES

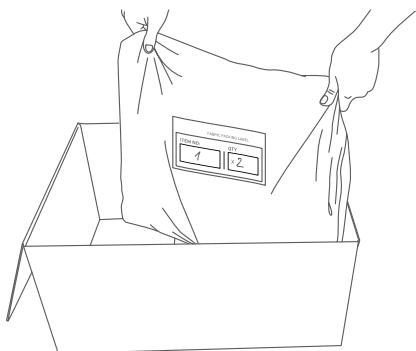

4

INSERT THE FABRIC INTO THE EXTRUSION STARTING WITH THE CORNERS ENSURE THE SILICON GASKET IS CONCEALED.
IF INSTALLING A LARGE GRAPHIC, YOU MAY NEED TO TEMPORARILY
INSERT SOME OF THE SILICONE GASKET ALONG THE TOP TO
HELP REACH THE CORNERS.

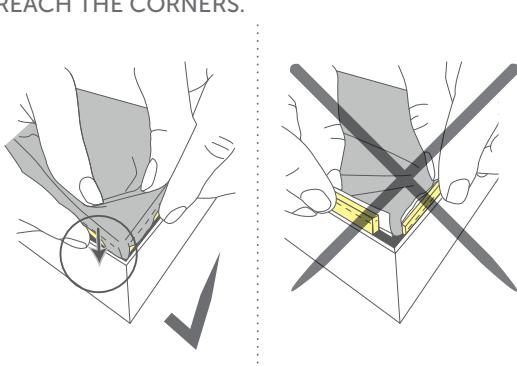


5


FOLLOW THE DIAGRAM BELOW FOR THE REMAINING SILICON GASKET EDGE.

STARTING WITH ALL CORNERS

ENSURE SILICON GASKET EDGE ON FABRIC IS PUSHED AS FAR INTO THE CHANNEL AS POSSIBLE, THIS SHOULD SUBSIDE ANY WRINKLES THAT MAY HAVE APPEARED.

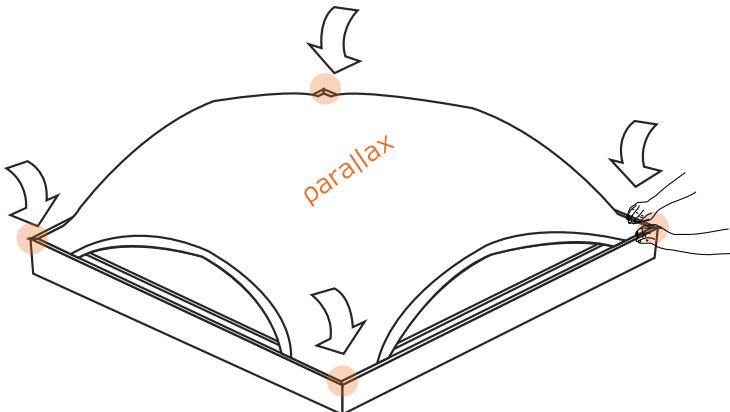


6

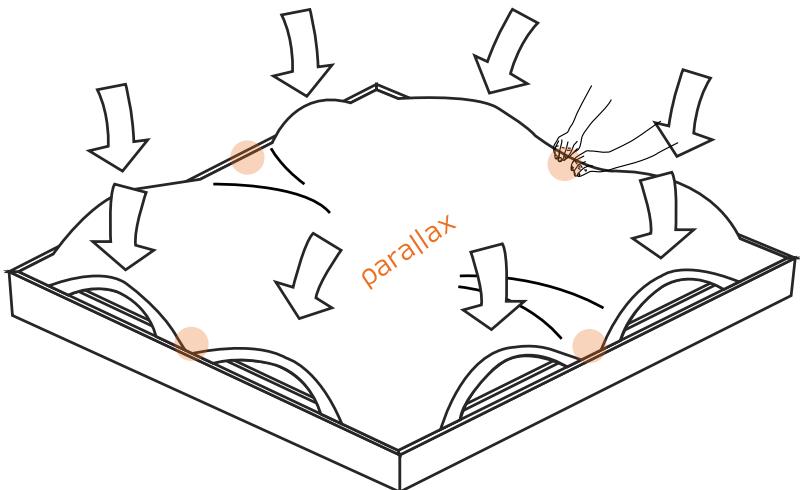

CONTINUE WITH THE MIDDLE OF EACH LENGTH,
AND THEN THE REMAINDER OF THE FABRIC

7

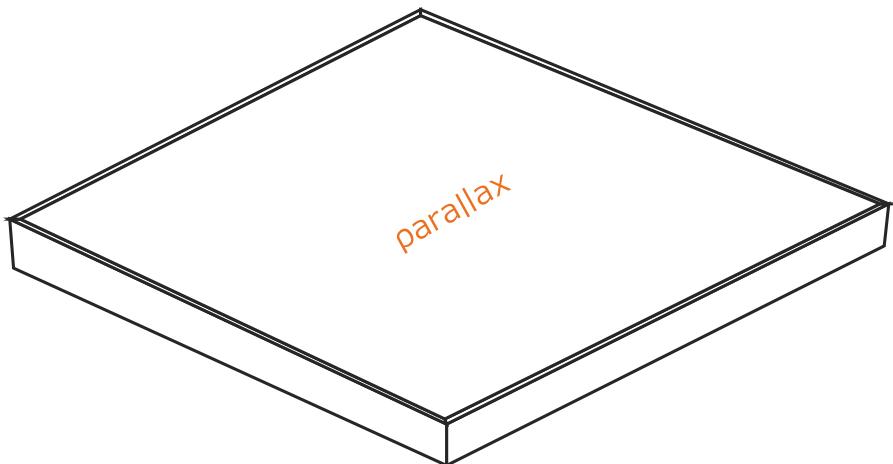

CONTINUE UNTIL ALL THE FABRIC HAS BEEN FULLY INSERTED

8

IF SMUDGES OR DIRTY AREAS APPEAR, WIPE GENTLY WITH
A DAMP TERRY CLOTH OR MICRO FIBER CLOTH